 


## HP Safecom User Guide

- How to Enable your Smartcard
- How to Release Print Jobs
- How to Scan to Email
- How to Copy
- Basic Maintenance

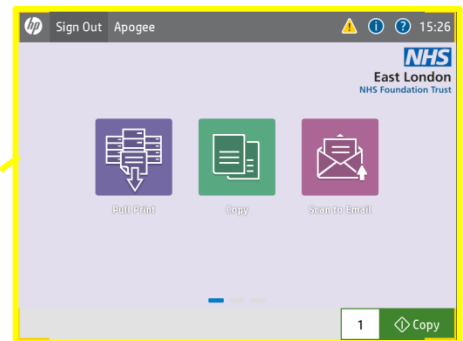

 
# ENABLING YOUR ID CARD

---

Before you can use the new Multi Function Device [MFD] you must enable your Smartcard.

You only need to do this once, and it can be done at any MFD.

- 1: Tap your Smartcard on the card reader located next to the print display.
- 2: You will be prompted to enter your Network Username & Password.  
**(This is the User Name use to log into your computer)**  
**The password is case sensitive! Use uppercase & lowercase buttons where needed.**
- 3: Press OK to confirm your settings. If you have entered the wrong information you will need to start again from Step 1.
4. You can use the pull-out keyboard to type if easier.


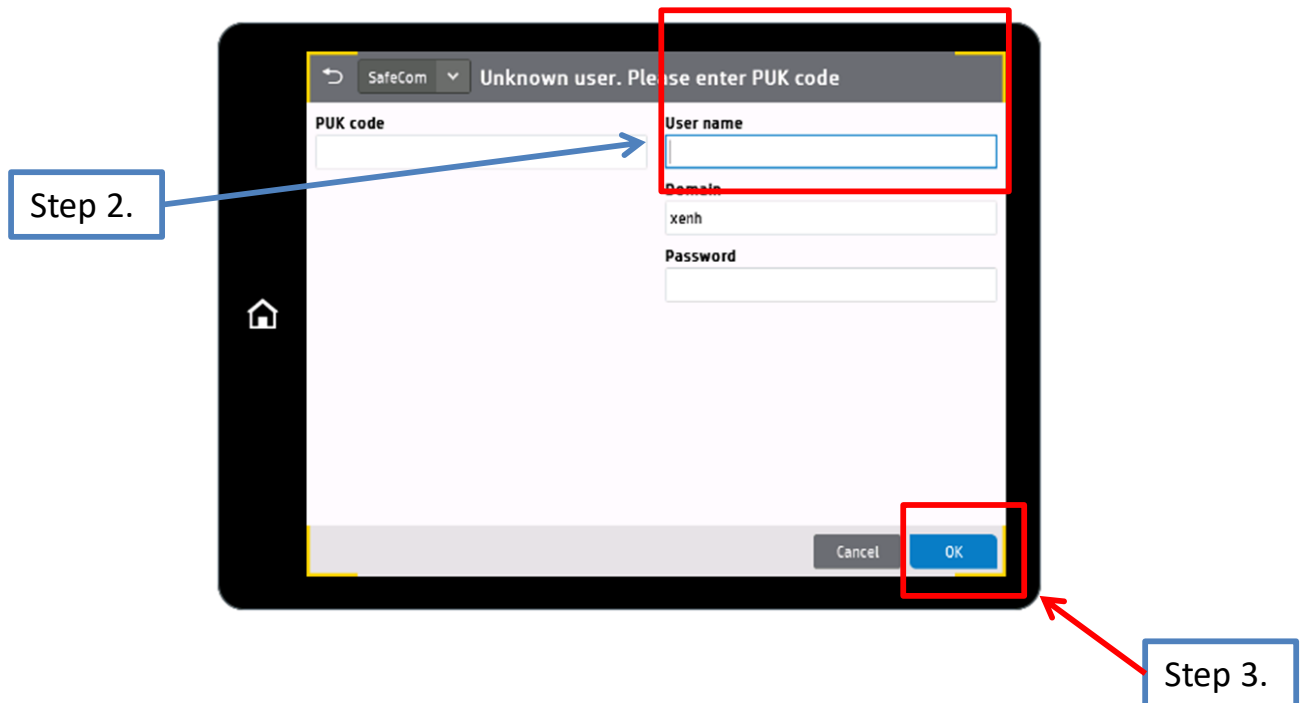


Once your card is enabled, you can login to any MFD by tapping your card.

# HOW TO RELEASE PRINT JOBS

  ---

Tap your Smartcard on the card reader located next to the print display, then tap Pull Print.

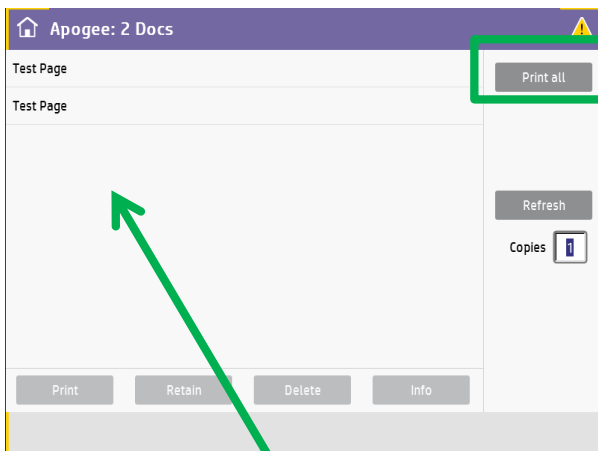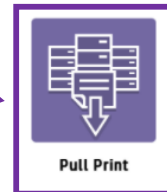

Tap Print all to automatically print all documents.

Tap on your required job to print. Then tap the Print button. You can also Delete any jobs not required.

The following confirmation box will appear; tap ok.





**PLEASE REMEMBER TO LOG OUT WHEN FINISHED**

Tap the homescreen icon  then tap sign out at the top of the screen

# HOW TO SCAN TO EMAIL

  Tap your Smartcard on the card reader located next to the print display. Tap Scan to Email.

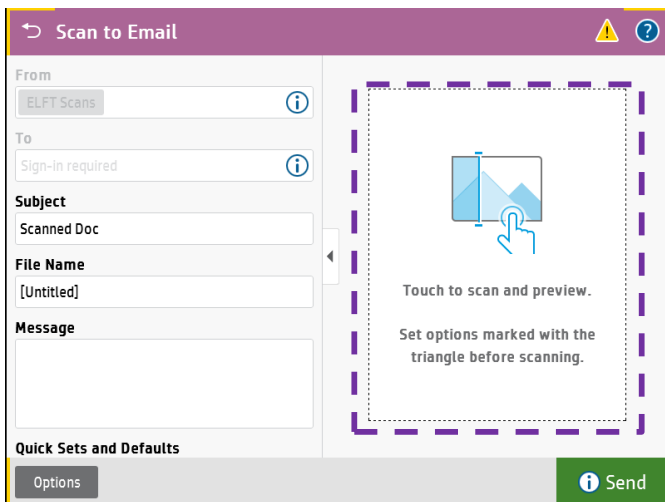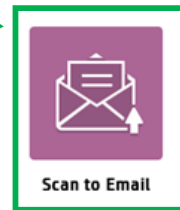


Tap Screen to Scan and Preview

Tap Send

Tap Options to select any additional scan settings.

 Select any additional Settings. Tap Hide to go back or **Send** to start scanning

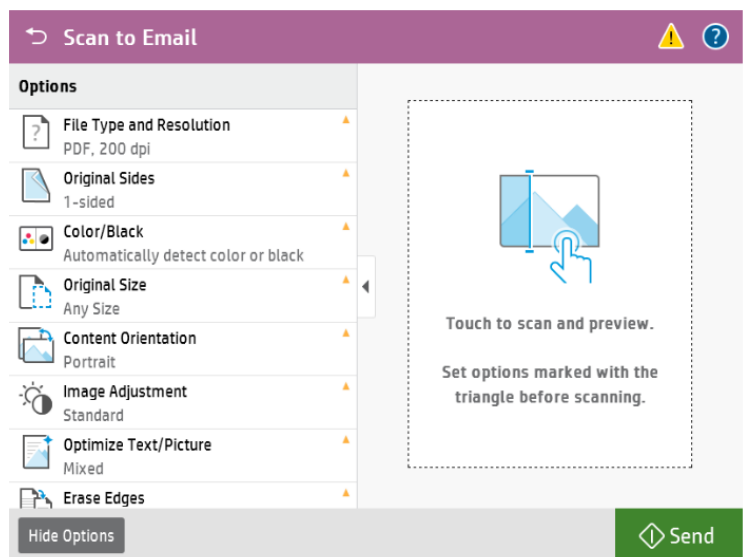

**PLEASE REMEMBER TO LOG OUT WHEN FINISHED**


Tap the homescreen icon  then tap sign out at the top of the screen

# HOW TO COPY


Tap your Smartcard on the card reader located next to the print display. Tap Copy.



 Tap Screen to Scan and Preview.

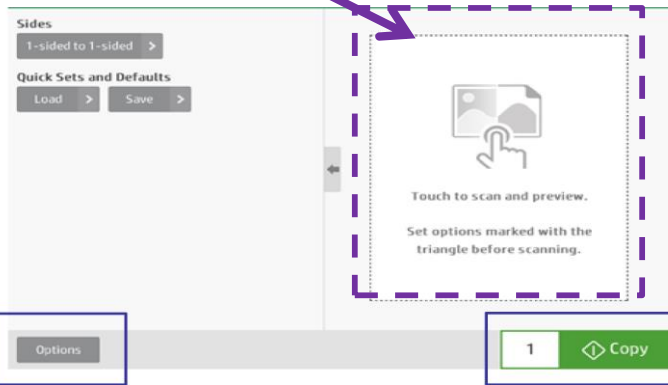

 Tap Options to select any copy settings.

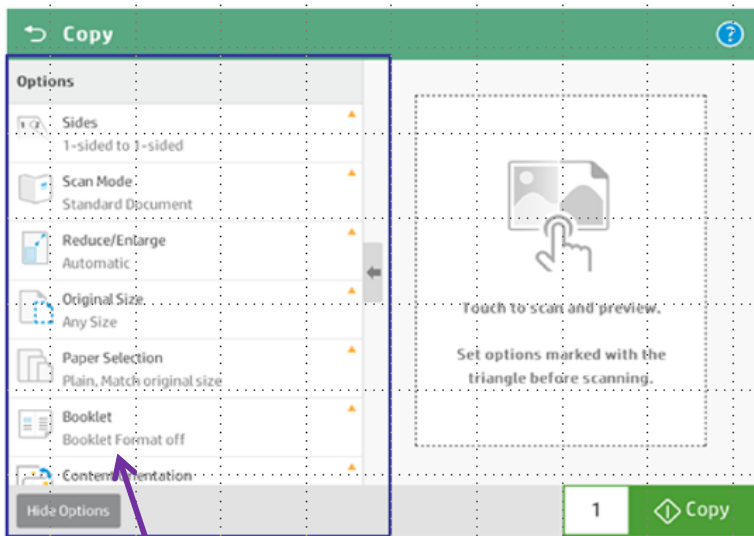

Tap Copy.

Press Copy


Scroll up and down with your fingers for more options

**PLEASE REMEMBER TO LOG OUT WHEN FINISHED**

Tap the homescreen icon  then tap sign out at the top of the screen

# JOB LOG SCREEN/CANCEL

 
Tap to the second page on the home screen . Some users will not see all options pictured

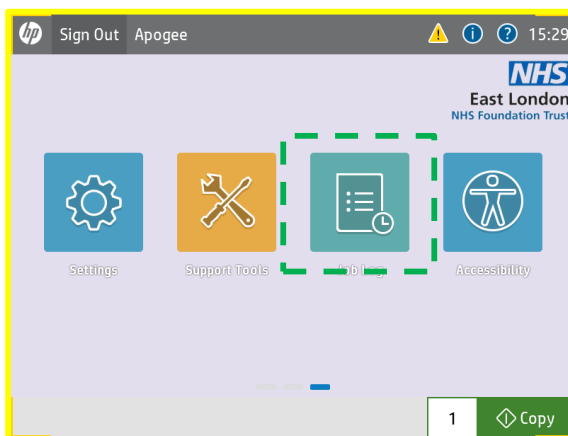

Tap Job log button



 
Select the job in the list to give the option to cancel or delete

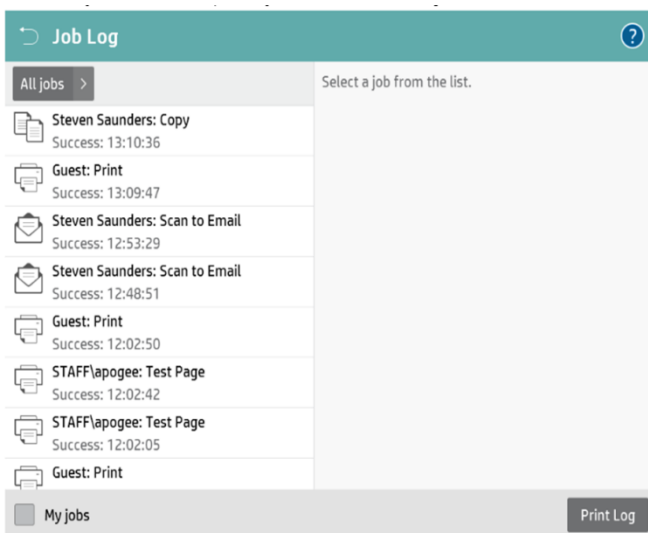


# LOADING PAPER TRAYS

---

 
- 1** Open the drawer

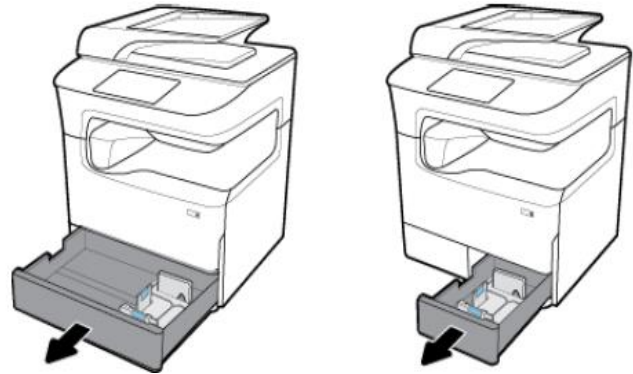


- 2** Undo the guides

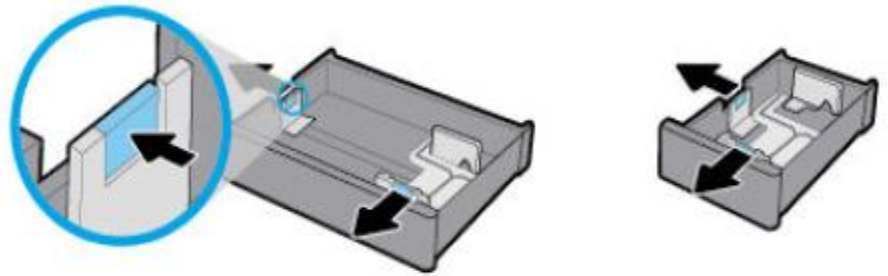 

 - 3** Close the guides, ensure the Paper is not above the stack height indicator

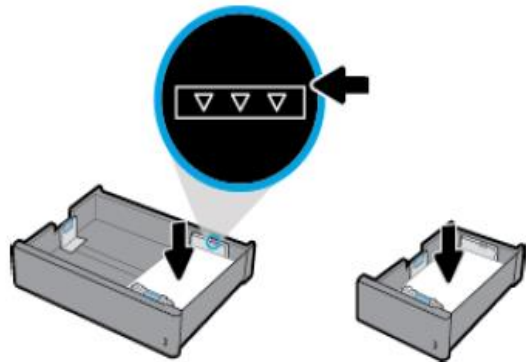


- 4** Close the drawer

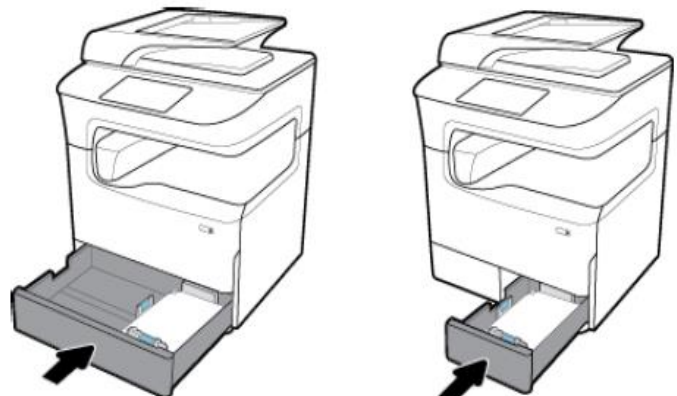 


# LOADING THE BYPASS/ MULTI PURPOSE PAPER TRAY

 
---

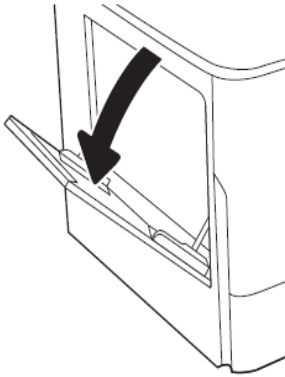


- ① Open the multi purpose tray

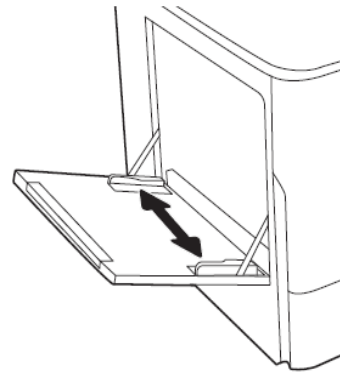 

 - ② Adjust the paper width guides to your paper size

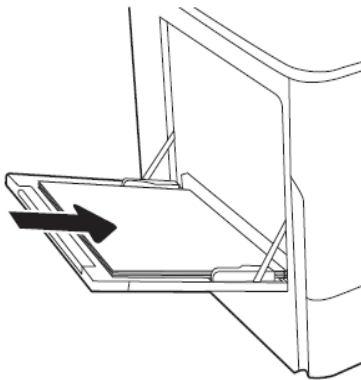

 - ③ Insert your paper into the tray  
Print side down for single sided  
Print side up for double sided

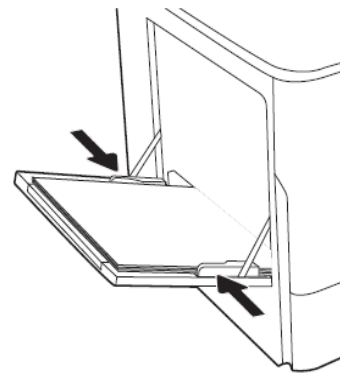

- ④ Adjust the guides so that they touch the paper stack but do not bend it

⑤



Remember to select the multipurpose tray as your paper Source in printer properties before sending print


---




# REPLACING TONER CARTRIDGES (INKJET)

 ---


- 1** Open the Toner Replacement cover. **2** Push the old cartridge inwards to release it

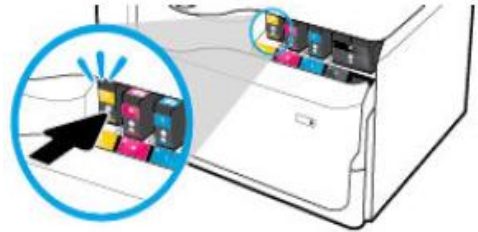

 - 3** Pull out the toner cartridge. **4** Do not touch the contacts on the new cartridge

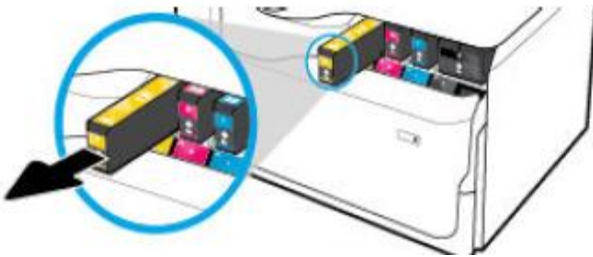

 - 5** Insert the new cartridge .It will Click into place **6** Close the door

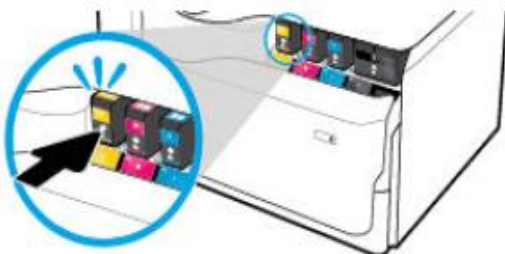


This procedure is for inkjet models only




# REPLACING TONER CARTRIDGES (LASER)

 
---

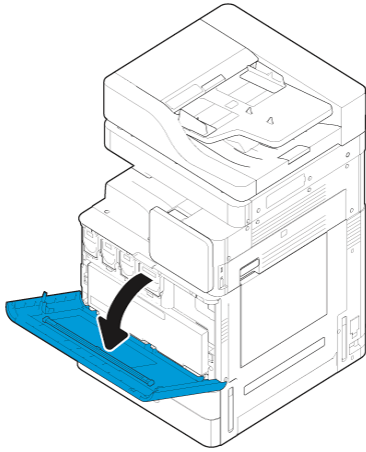


**1** Open the front cover

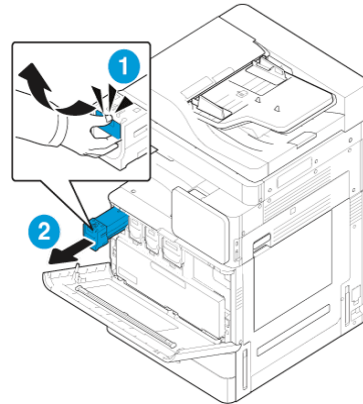 


**2** Pull out the empty toner

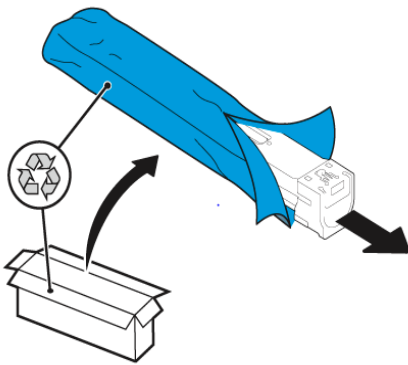 

 
**3** Remove new cartridge from packaging

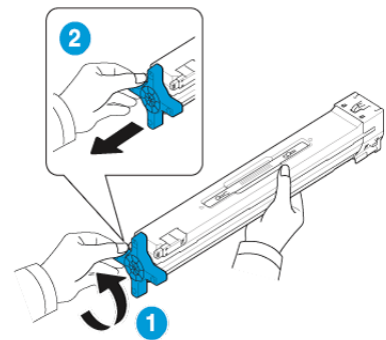

 **4** Rotate the end cap anti-clockwise until it releases

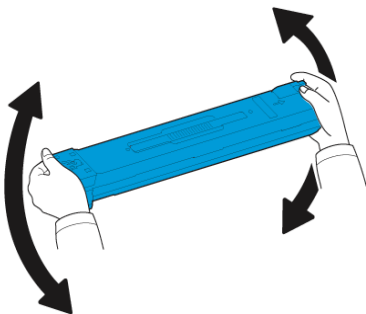

**5** Rock cartridge 5/6 times

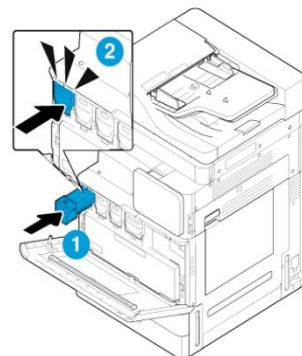 

**6** Insert cartridge and click into place. Close the door.

---



## LOCATING PAPER JAMS

---

Screens indicating the locations of paper jams and instructions on how to clear the paper jam will appear on the touch panel display.

 
The screen repeatedly appears on the touch display until the paper jam is entirely cleared.

Examples of where a jam can occur are below.

### 1 for LaserJet models



### 2 for inkjet models

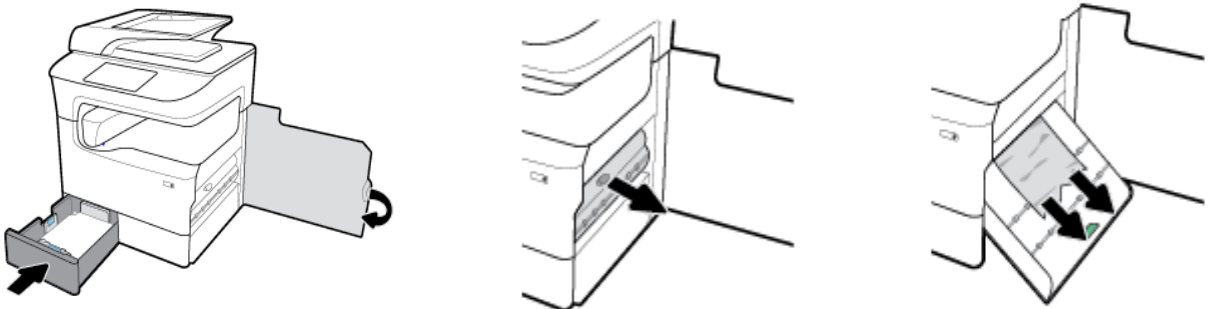

Once the jam is fully cleared the device will resume printing

---